



## Screw Pattern


### { TUFF-RIB }

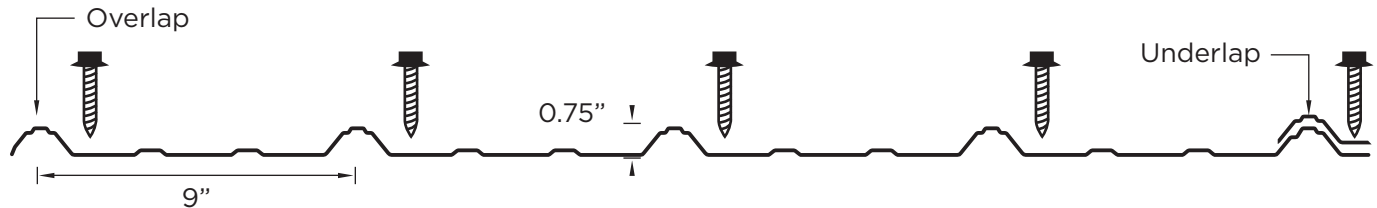


### { LOW-RIB }

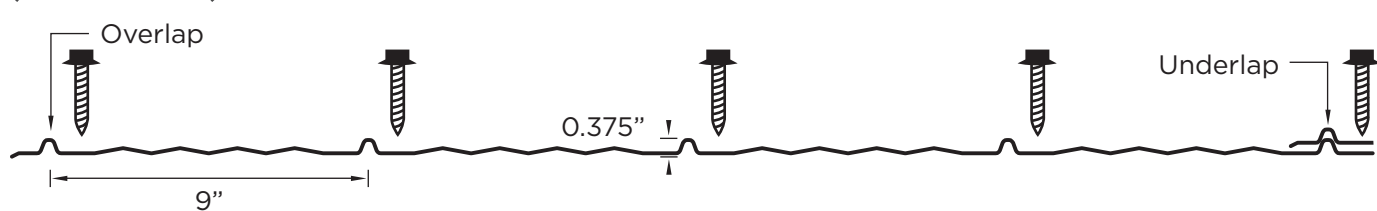


### { PBR }

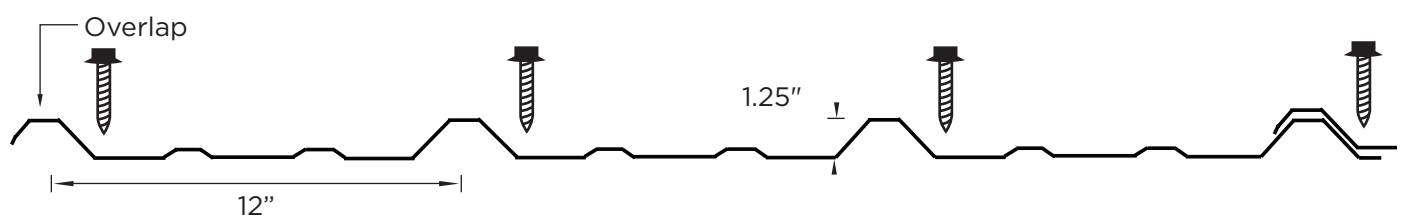

### { High Wind or Low Pitch Application - TUFF-RIB Illustrated }

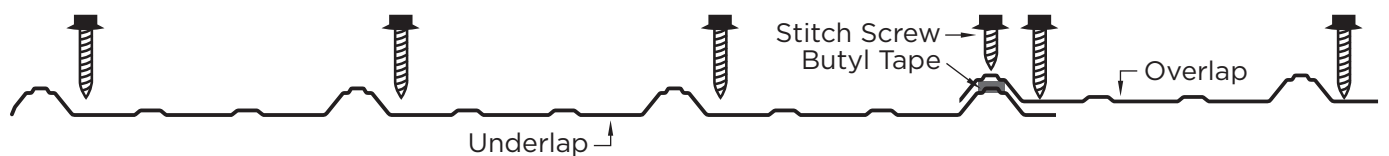


### { Bottom Edge Screw Pattern - PBR Illustrated }



### { FASTENER APPLICATION }

#### Correct




Sealing material slightly visible at edge of metal washer. Assembly is water tight.

#### Too Loose



Sealing material not visible, not enough compression to seal properly.

#### Too Tight

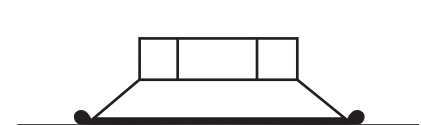

Sealing material extruded beyond edge of washer.