


Screw Pattern Installation


{ HYBRID 35® }

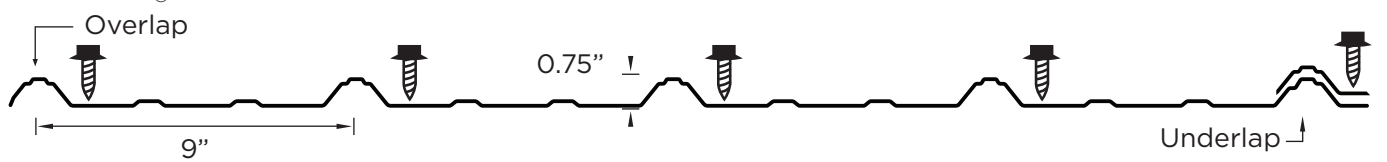

{ TR-936® }




{ LR-936® }

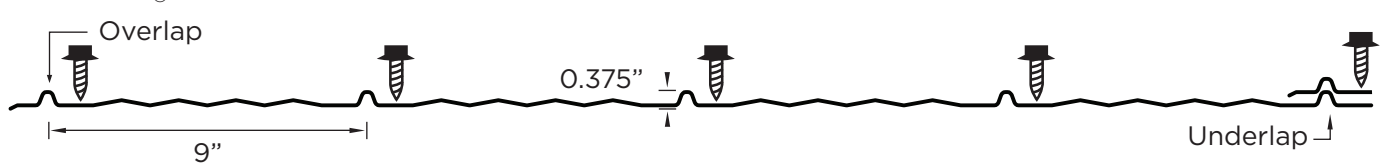

{ PBR-1236® }



{ High Wind or Low Pitch Application - PR-936® Illustrated }

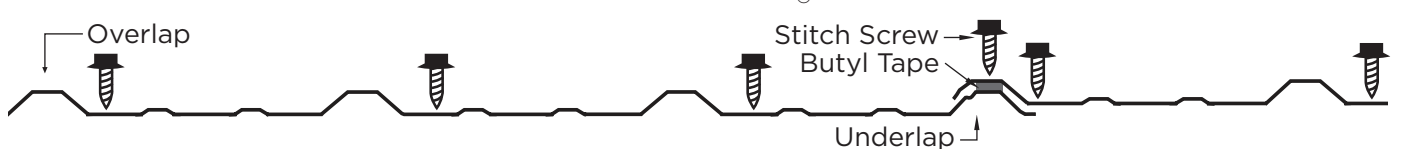

{ Bottom Edge Screw Pattern - PBR-1236® Illustrated }



{ FASTENER APPLICATION }



Please note: using an impact style screw gun to install fasteners voids the warranty.